


User manual
SMALL CUP

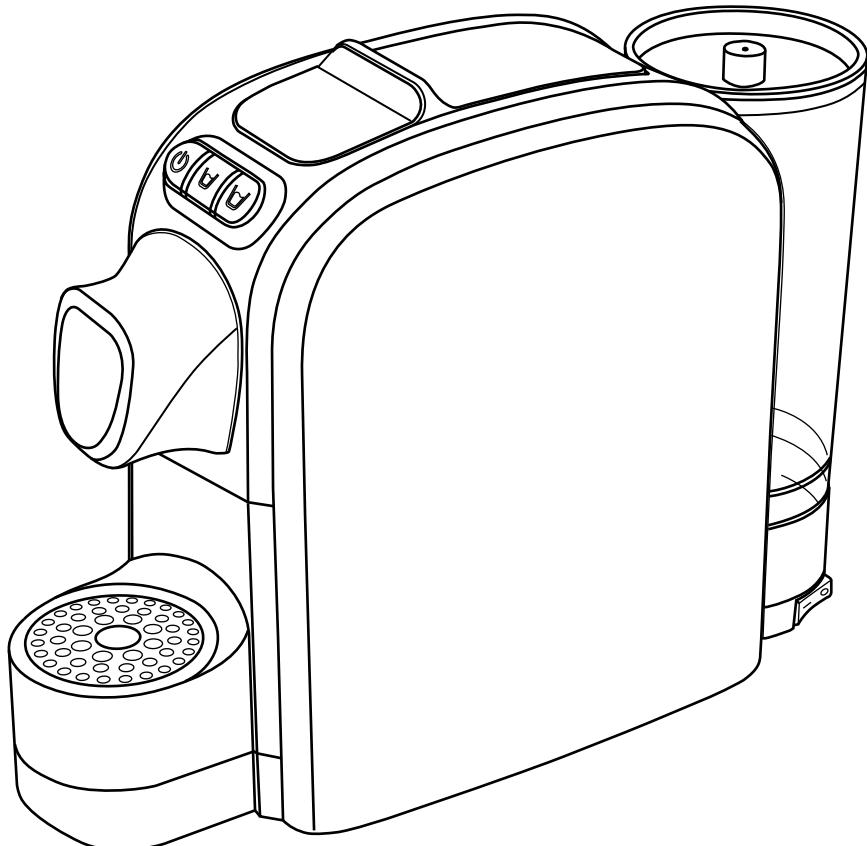

Index:

| | |
|--------------------------------------|----|
| Safety precautions | 4 |
| General information | 4 |
| First use | 5 |
| Coffee preparation | 6 |
| Regulation of the coffee level | 6 |
| Coffee temperature adjustment | 7 |
| Restore factory settings | 8 |
| Machine descaling | 8 |
| Water softener | 8 |
| Troubleshooting | 9 |
| Specs | 10 |
| Disposal | 10 |
| Warranty | 10 |
| Service center | 11 |

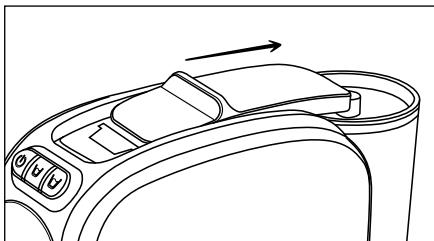
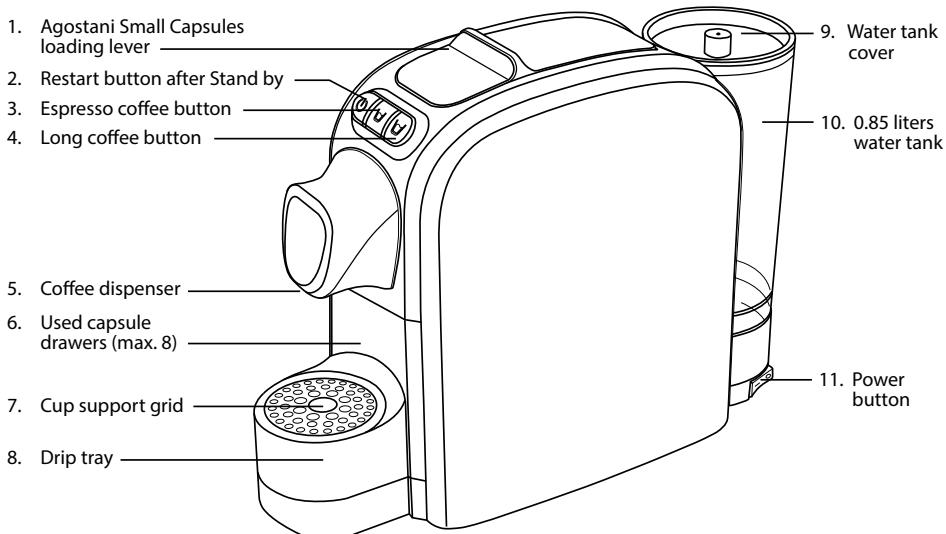


Figure A

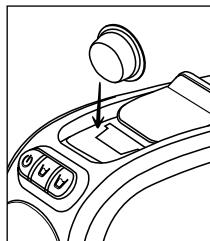


Figure B




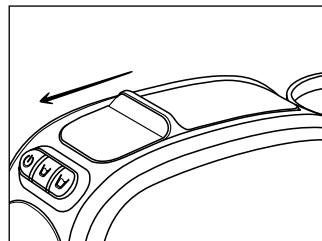


Figure C

Height-adjustable cup supporting grid

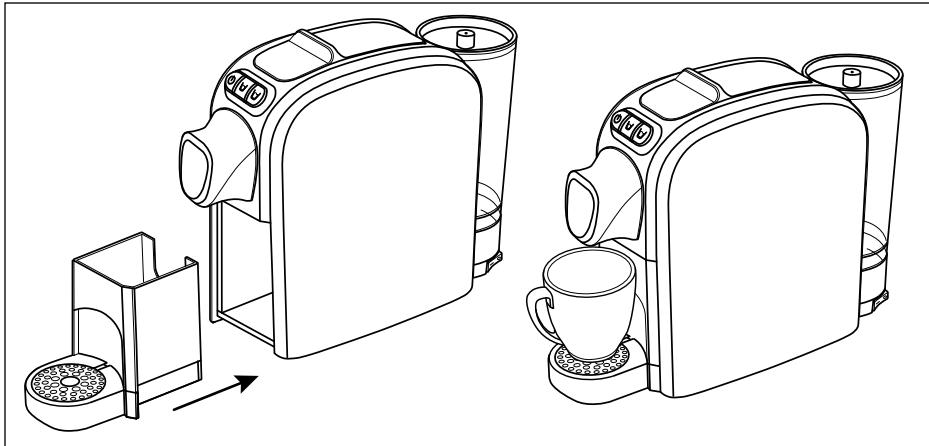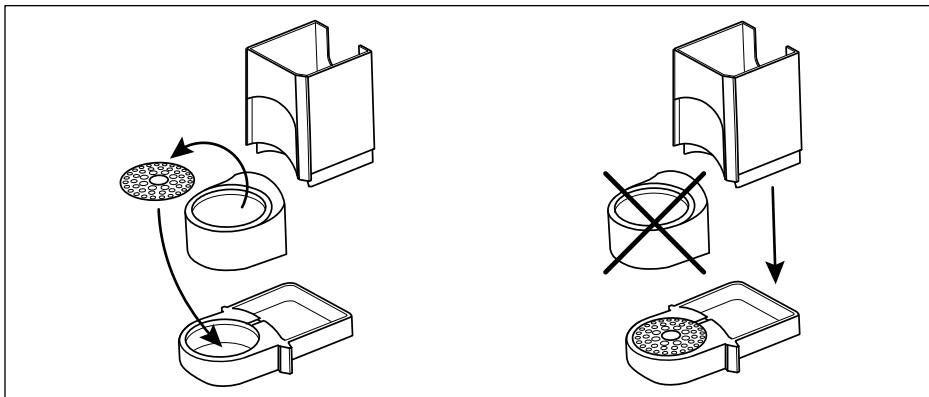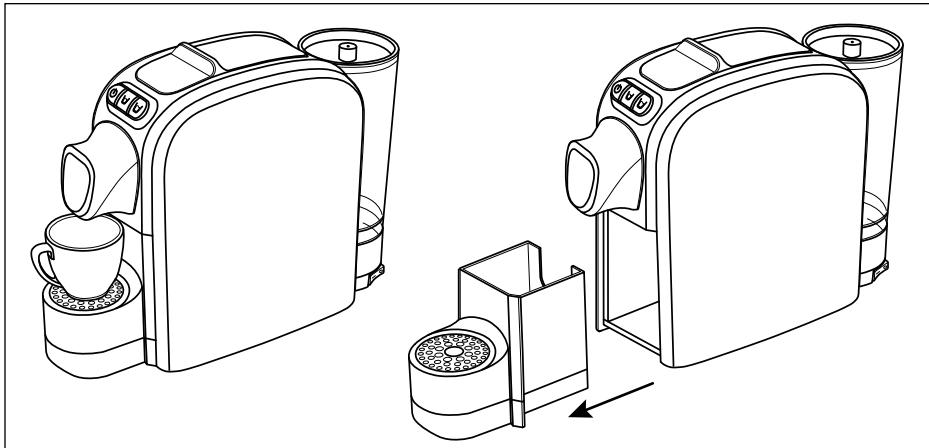

Safety precautions

- Connect the appliance only to mains grounded suitable connections. Using incorrect connections voids the warranty.
- Remember not to position the power cable near sharp edges.
- Keep the appliance away from heat sources.
- Please do not use the appliance in the case of bump damages.
- Do not open the appliance: danger of electric discharge.
- Do not insert any object into the openings of the appliance, danger of fire or electric discharge.
- Do not insert your fingers into the openings of the appliance: danger of burns.
- Use the appliance only with a full water tank.
- This appliance uses ONLY Agostani Small capsules. The capsules can only be used once.
- Please keep these instructions.

General Indications

1. Agostani Small Capsules loading lever.
2. Restart button after Stand by.
3. Espresso coffee button.
4. Long coffee button.
5. Coffee dispenser.
6. Recovery tray 8 used capsules.
7. Cup supporting grid.
8. Drop collection tray.
9. Water tank cover.
10. 0.85 liters water tank.
11. Power button. General Indications.

First use

1. Place the machine on a flat and stable surface, away from water and heat sources.
2. Remove the protective plastic film from the drop collection tray.
3. The water tank must be removed from the machine, rinsed and filled with drinking water.
4. Turn on the machine with the power button 11.
5. When all 3 buttons    feature a steady blue light, the machine has reached the right temperature and is ready for use.
6. Do not insert the capsule and press the dispensing button for long coffee 4: the spout 5 will deliver hot water.
7. In case of no water supply, please repeat point 6.
8. Open capsules loading lever (see figure A).
9. Please insert Agostani Small capsules only (see Figure B).
10. Close the lever (see figure C).
11. Press the coffee dispensing button 3  or 4 
12. Once the coffee has been delivered, please open and close lever 1 to place the capsule into the appropriate capsule holder 6.
13. After 25 minutes of inactivity, the machine switches automatically to energy-saving mode (standby mode). Please press button 11 and when not in use for a longer period.

Coffee preparation

1. Press the Standby button 2  and see the lights flashing.
2. When all 3 buttons    feature a steady blue light, the machine has reached the right temperature and is ready for us.
3. Open capsules loading lever 1 (figure A).
4. Please insert Agostani Small capsules only (see Figure B).
5. Close lever 1 (figure C).
6. Press the coffee dispensing button 3  or 4 
7. Once the coffee has been delivered, please open and close lever 1 to place the capsule into the appropriate capsule holder 6.

Note: The machine will automatically switch to power save mode, after 25 minutes.


Coffee level adjustment

1. Exit stand-by by pressing button 2 
2. When all 3 buttons    feature a steady blue light, the machine has reached the right temperature and is ready for adjustment.
3. Open the capsules loading lever 1 (figure A).
4. Please insert only Agostani Small capsules (figure B).
5. Close the lever (see figure C).
6. Press and hold the button you want to adjust 3  or 4 
7. The machine pump starts up after about 5 seconds: please keep holding the button down.
8. Release the button when the desired coffee level has been reached.


Coffee temperature adjustment

1. Exit stand-by mode by pressing button 2 
2. When all 3 buttons    feature a steady BLUE light, press and hold button 2 (stand by)  for 5 seconds until it becomes RED.
3. The factory-set temperature is 88 ° C
4. Raise the temperature to 90 ° C by holding down button 4 (long coffee)  for 5 seconds until the light flashes RED once.
5. To increase the temperature to 2° C, please hold button 4 (long coffee)  for 5 seconds until the RED light flashes twice.
6. To lower the temperature to 86° C, please hold the button 3 (Espresso coffee)  for 5 seconds until the RED light flashes twice.
7. To lower the temperature to 2° C, please hold the button 3 (Espresso coffee)  for 5 seconds until the RED light flashes twice.

TO INCREASE THE TEMPERATURE

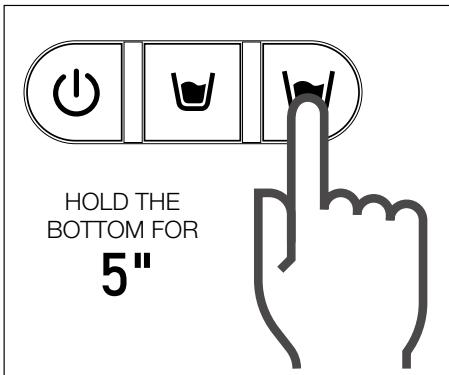

TO LOWER THE TEMPERATURE

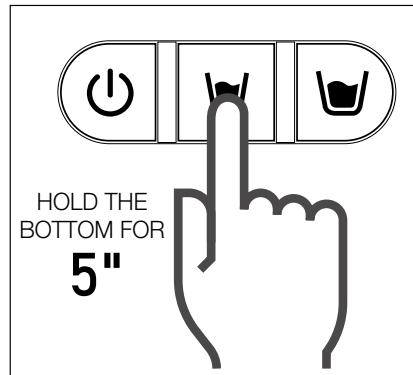

Factory reset (temperatures and doses)

1. Exit stand-by mode by pressing button 2 
2. When all 3 buttons    feature a steady blue light, simultaneously press button 3 (espresso coffee)  and 4 (long coffee)  for 10 seconds.
3. The blue lights of buttons 3  and 4  will flash 3 times to signal the factory reset has been performed.

Descaling

1. Please use only specific descaling products for coffee machines.
2. We recommend descaling once a month to prevent the formation of limescale.
3. Dissolve the contents of the descaling sachet inside the water tank.
4. Dispense the entire water tank without inserting any coffee capsule.
5. Rinse the water tank well and fill it with water drinking.
6. Dispense the entire water tank without inserting any coffee capsule.

Water softener

We recommend using a universal softener filter in the water tank to protect the machine and improve the taste of coffee.

Troubleshooting

| | |
|--------------------------------|---|
| The machine does not turn on | Check the power cable, the correct insertion of the plug, and the electricity in the electrical outlet. Check the main power switch (bottom 11) |
| The machine does not dispense | Check that the tank is full of water and correctly positioned (remove and reposition). |
| Coffee does not get hot enough | Preheat the cups with hot water. Change the coffee temperature as indicated in the manual on page 7. Descaling as indicated in the manual on page 8. |
| The door does not open | Please turn off the machine and wait for a few minutes: as it cools down, the pressure decreases, then try to open again. |
| The machine is noisy | Check that the tank is full of water and correctly positioned (remove and reposition). |
| The machine switches off | The machine switches off after 25 minutes of inactivity, thus reducing energy consumption. |
| All the lights flash | Turn off the machine, wait for 1 minute and turn it on again. |
| Stuck capsule | Switch off the machine, empty the used capsule drawer, open and close the door. If the problem could not be solved, please contact Agostani srl assistance to the number +39 0341/530409 or on WhatsApp at + 39 3456210066 |
| Presence of coffee grounds | Please use exclusively Agostani Small capsules: this machine is not compatible with other caps. |

Specs

| | |
|----------------------------|---|
| Model | Small Cup |
| Size | width 140 mm depth 370mm height 288mm |
| Weight | 3.3 kg |
| Capacity of the water tank | 0,85 liters |
| Pump pressure | 19 Bar |
| Power supply | 220-240V/50Hz |
| Power | 1100 Watt |
| Authomatic shutdown | after 25 minutes |

Disposal

The machine is made with top-quality materials that can be reused or recycled. Please deposit the device in a specific collection center. Local authorities provide information on disposal.

Warranty

Agostani srl warrants this product against any defects of manufacture or materials for two years from the date of purchase.

During this period (*legal guarantee), Agostani SRL will repair or replace the appliance free of charge if a defect is found, at its sole discretion.


Replaced products or fixed components will be warranted only for the part of the original warranty which has not expired or for the following six months, depending on which one is longer.

Within the limits and terms of the law in force, this guarantee is not valid for defects caused by damage, incorrect use, inadequate maintenance, or natural wear and tear.

The conditions of this warranty do not exclude, reduce or modify the provisions of current law applied to the sale of the product. If you believe that the product is defective, please contact the Agostani srl assistance center at the telephone number +390341/530409 or writing an e-mail to info@tuttocialde.it

Service center

Please contact Agostani srl at the telephone number +390341/530409 or writing an e-mail to info@tuttocialde.it.

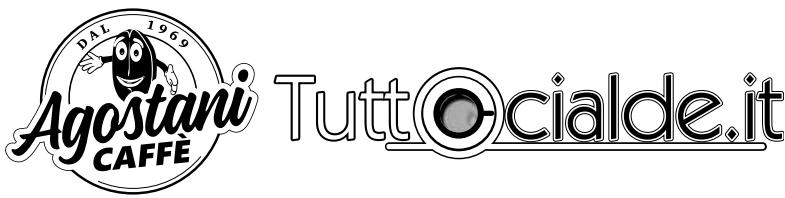

Tuttocialde.it

Distributed by **AGOSTANI SRL**

Viale Lombardia, 4/1 - 23847 Molteno (Lecco)

Tel. 0341 530409

info@tuttocialde.it